 
 


Clavija 1: VBAT-01 (B+) —
Clavija 2: GND-01 (B-) —
Clavija 3: 232-RX-01 (señal) —
Clavija 4: 232-TX-01 (señal) —



Sensor del nivel
de combustible