 
 


针脚 1 - V电池-01 (B+)

针脚 2 - GND-01 (B-)

针脚 3 - 232-RX-01 (信号)

针脚 4 - 232-TX-01 (信号)



燃油位传感器