

To "COMMANDS" prompt of  
"MAIN" menu

From "COMMANDS" prompt of  
"MAIN" menu



COMMANDS  
PTI  
  
VOLTAGE: 460 V



To MANUAL FUNCTION TEST



To MANUAL FUNCTION TEST



Starts PTI