

Keypad Operating Tips

STANDARD DISPLAY

Text Input:

- To enter a number: Press the **UP** or **Down** key to increase or decrease the value of a digit in the display.
- Press the ENTER key to scroll the cursor to the right.

To Enter a Controller Menu or Submenu:

- Press ALARM key to directly enter the Alarm List Menu.
- Press the ENTER key or the ESCAPE key to enter the Main Menu.
- Press ENTER key to enter a menu from the Main Menu, or a submenu from its parent menu.
- Press Escape key to return to the Main Menu from a menu, or a menu from a submenu.

To Scroll in a menu:

- Press UP key to scroll up.
- Press Down key to scroll down.


To Enter a Command or execute a task: • Press Enter key.

To Enter a New Value in a Screen:

• Press ENTER key and ESCAPE key at the same time.

To change language

• Press Language key.

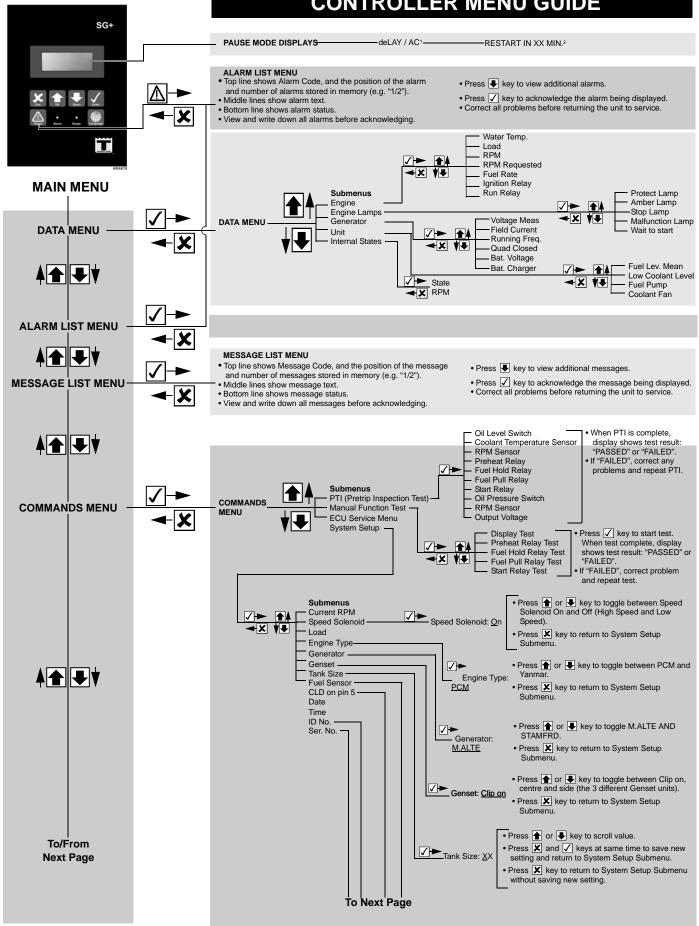

Footnotes:

1"dELAy/ AC." screen indicates controller has a 2 minute delay. ²"RESTART IN XX MIN." screen indicates controller has stopped unit operation due to an alarm. Controller will attempt to restart unit in the time shown.

CONTROLLER MENU GUIDE