

Wire Name	From Component	From Port	To Component	To Port	Wire Name	From Component	From Port	To Component	To Port
2-01	J9	1	BAT-POST-01	1	K75-02	ECU-INT3	5	YSAD	5
2C-01	ON_OFF	1	J13	1	K90-02	ECU-INT3	6	YSAD	6
2EGR-01	FS1-1	1	EGR-87	1	OC-01	DSR-14	1	OC	1
2EGR-02	FS1-2	1	ECU-INT1	6	ORG-01	DSR-15	1	ORG	1
8-01	ON_OFF	2	J12	1	QR-01	QR-85	1	J4	4
8S-01	FS2-1	1	8S	1	QR-02	QR-86	1	J4	5
8S-02	STR-87	1	FS2-2	1	U1-01	U1-2	1	U1	1
8S-03	STR-30	1	EGR-30	1	U2-01	U2	1	J6	3
BAT-01	BAT+	1	SP-1	1	V1-01	V1-2	1	V1	1
BAT-02	SP-1	2	BAT-POST-04	1	V2-01	J6	4	V2	1
BAT-03	STR-30	1	BAT-POST-05	1	W1-01	W1-2	1	W1	1
BAT-04	BAT+	1	STR	1	W2-01	W2	1	J6	5
BATN-01	BAT-	1	CH	1	WHT-01	J1	6	SP-1	1
CANH-01	J20	1	ECU-INT4	A	WIFN-01	J1	14	WIF	C
CANL-01	J20	3	ECU-INT4	B	WIFP-01	J1	18	WIF	A
CH-01	CH-2	1	CH-1	1	WIFS-01	J1	1	WIF	B
CH-03	CLS	2	3_GND_LUG	1	WL-01	J1	5	CLS	1
CH-04	J11	1	CH	1					
CH-05	7_GND_LUG	1	CH-01	1					
CHFP-01	FP-INT	B	5_GND_LUG	1					
ECUCH-01	ECU-INT1	3	EGR	1					
ECUGP-01	ECU-INT1	4	GPR	2					
ECUKS-01	ECU-INT1	8	J1	7					
ECUN-01	4_GND_LUG	1	ECU-INT5	B					
ECUP-01	J9-2	1	ECU-INT5	A					
ECUR-01	ECU-INT1	7	J1	8					
ECUSTRH-01	ECU-INT2	2	STR	2					
ECUSTRL-01	ECU-INT1	2	STR	1					
EGR-01	ECU-INT1	5	EGR	2					
FP-01	FP-INT	A	J1	9					
GND-01	J10	1	2_GND_LUG	1					
GP-01	GP	1	GP-87	1					
GP-02	FS4-1	1	GP-30	1					
GP-03	BAT-POST-02	1	FS4-2	1					
GPRGND-01	GPR	1	8_GND_LUG	1					
JMP-01	J20	7	J20	8					
K53-02	ECU-INT3	4	YSAD	4					
K65-02	ECU-INT3	3	YSAD	3					

SIZE

A3

CODE IDENT NO

-

DWG NO

3E63574

REV

D

SCALE: NONE

REF DWG: -

SHEET 5 OF 5

RELEASED 01 Oct/ 2020 17:12:04 GMT