

VALUES

CONTROLS

TRIP START

TEMPERATURE SETPOINT

DEFROST TERMINATION

ALARM

MESSAGE

CONFIG

UNIT

OPTIONS

SYSTEM

EXIT UP DOWN ENTER

DEFROST TERMINATION

18.0C

CANCEL UP DOWN CONFIRM

F1 F2 F3 F4

F1 F2 F3 F4