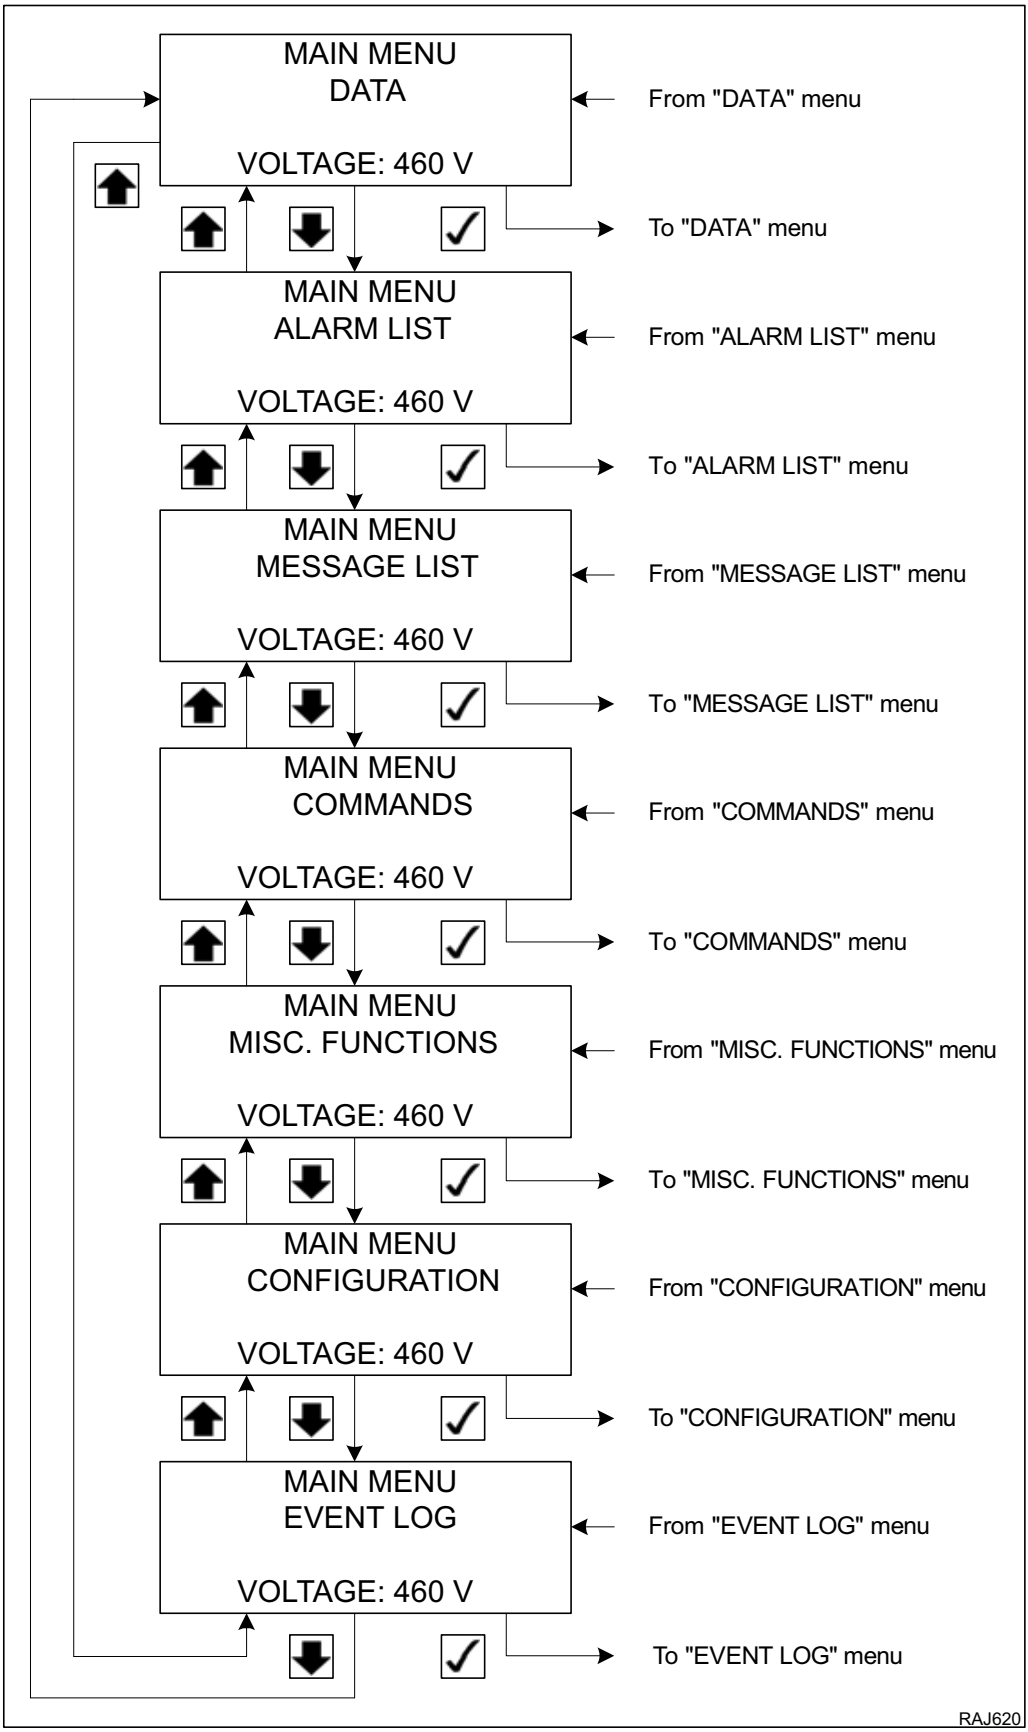
MAIN MENU
DATA
VOLTAGE: 460 V
From "DATA" menu
To "DATA" menu
MAIN MENU
ALARM LIST
VOLTAGE: 460 V
From "ALARM LIST" menu
To "ALARM LIST" menu
MAIN MENU
MESSAGE LIST
VOLTAGE: 460 V
From "MESSAGE LIST" menu
To "MESSAGE LIST" menu
MAIN MENU
COMMANDS
VOLTAGE: 460 V
From "COMMANDS" menu
To "COMMANDS" menu
MAIN MENU
MISC. FUNCTIONS
VOLTAGE: 460 V
From "MISC. FUNCTIONS" menu
To "MISC. FUNCTIONS" menu
MAIN MENU
CONFIGURATION
VOLTAGE: 460 V
From "CONFIGURATION" menu
To "CONFIGURATION" menu
MAIN MENU
EVENT LOG
VOLTAGE: 460 V
From "EVENT LOG" menu
To "EVENT LOG" menu
RAJ620