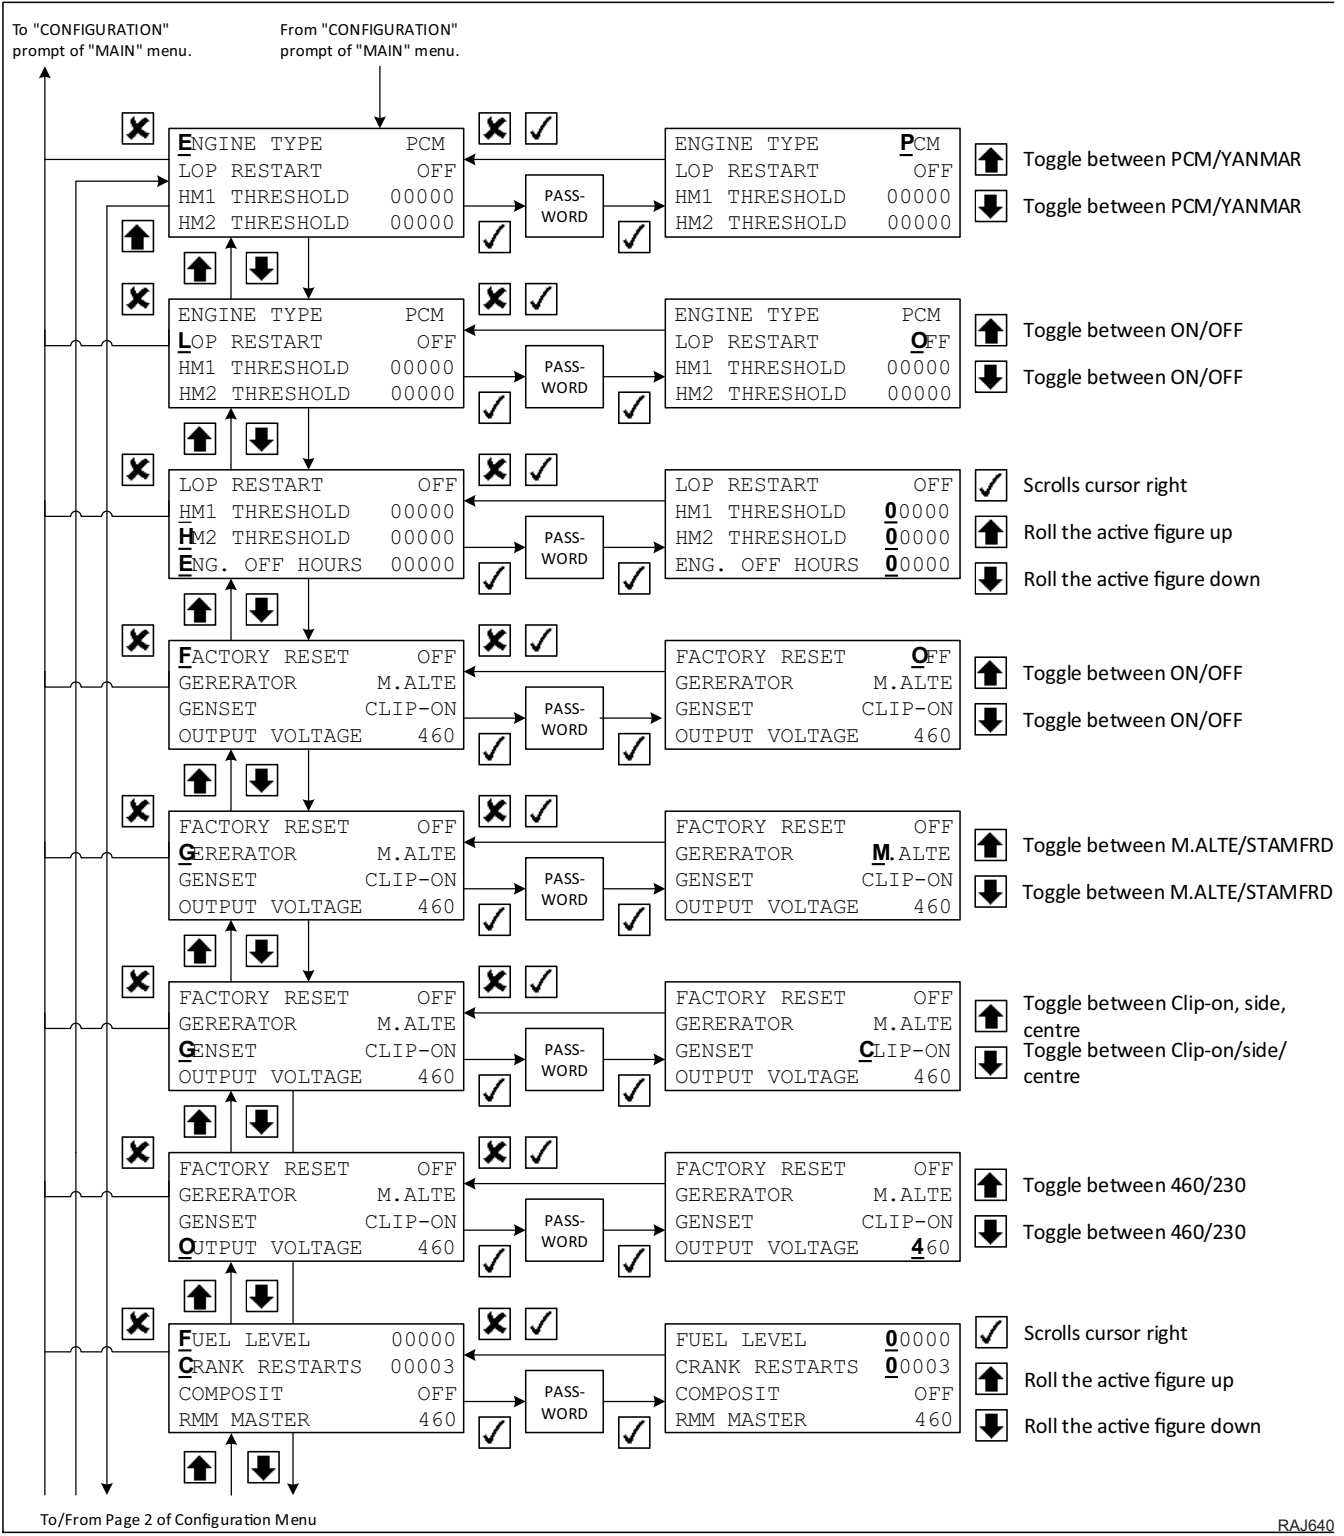
To "CONFIGURATION" prompt of "MAIN" menu.
From "CONFIGURATION" prompt of "MAIN" menu.
ENGINE TYPE PCM
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
PASS-WORD
ENGINE TYPE PCM
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
Toggle between PCM/YANMAR
Toggle between PCM/YANMAR
ENGINE TYPE PCM
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
PASS-WORD
ENGINE TYPE PCM
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
Toggle between ON/OFF
Toggle between ON/OFF
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
ENG. OFF HOURS 00000
PASS-WORD
LOP RESTART OFF
HM1 THRESHOLD 00000
HM2 THRESHOLD 00000
ENG. OFF HOURS 00000
Scrolls cursor right
Roll the active figure up
Roll the active figure down
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
PASS-WORD
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
Toggle between ON/OFF
Toggle between ON/OFF
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
PASS-WORD
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
Toggle between M.ALTE/STAMFRD
Toggle between M.ALTE/STAMFRD
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
PASS-WORD
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
Toggle between Clip-on, side, centre
Toggle between Clip-on/side/ centre
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
PASS-WORD
FACTORY RESET OFF
GERERATOR M.ALTE
GENSET CLIP-ON
OUTPUT VOLTAGE 460
Toggle between 460/230
Toggle between 460/230
FUEL LEVEL 00000
CRANK RESTARTS 00003
COMPOSIT OFF
RMM MASTER 460
PASS-WORD
FUEL LEVEL 00000
CRANK RESTARTS 00003
COMPOSIT OFF
RMM MASTER 460
Scrolls cursor right
Roll the active figure up
Roll the active figure down
To/From Page 2 of Configuration Menu
RAJ640