

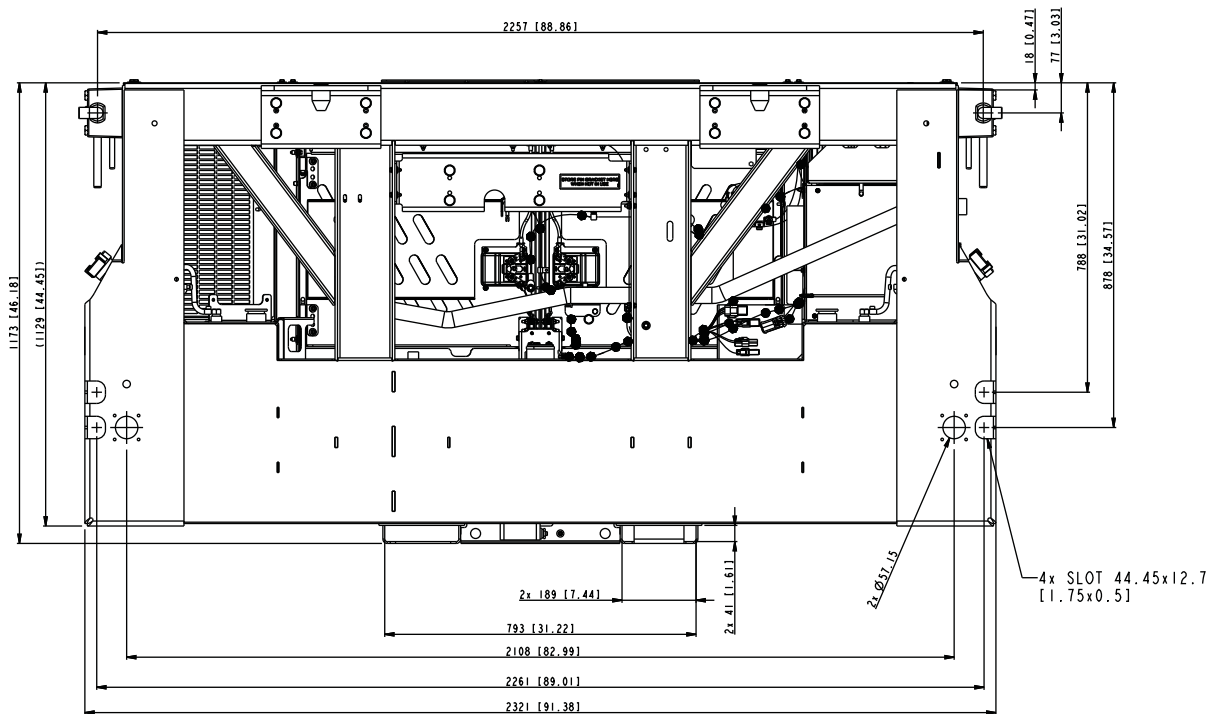


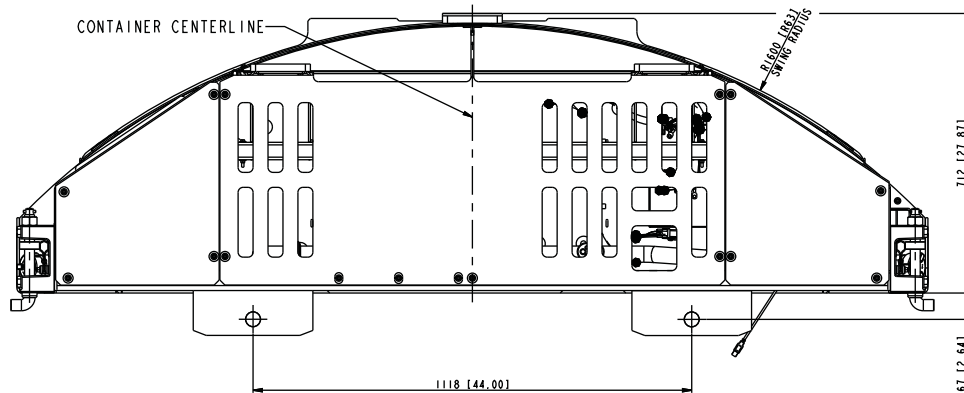

INSTALLATION INSTRUCTIONS:

- 1.) CAUTION: INSERT LUG → INTO CORNER CASTING.
- 2.) TO LOCK - PULL HANDLE DOWN ↓ AND CHECK SHAFT END - HORIZONTAL ↔.
- 3.) TIGHTEN NUT WITH HAND WRENCH

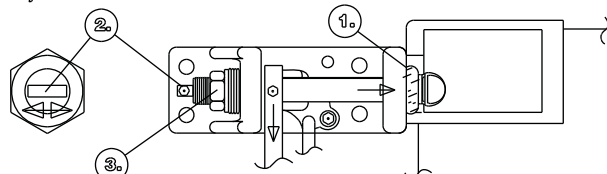

- 4.) INSTALL LOWER UNIT MOUNTING BOLTS (220-230 FT-LBS / 300-380 N-M)

