


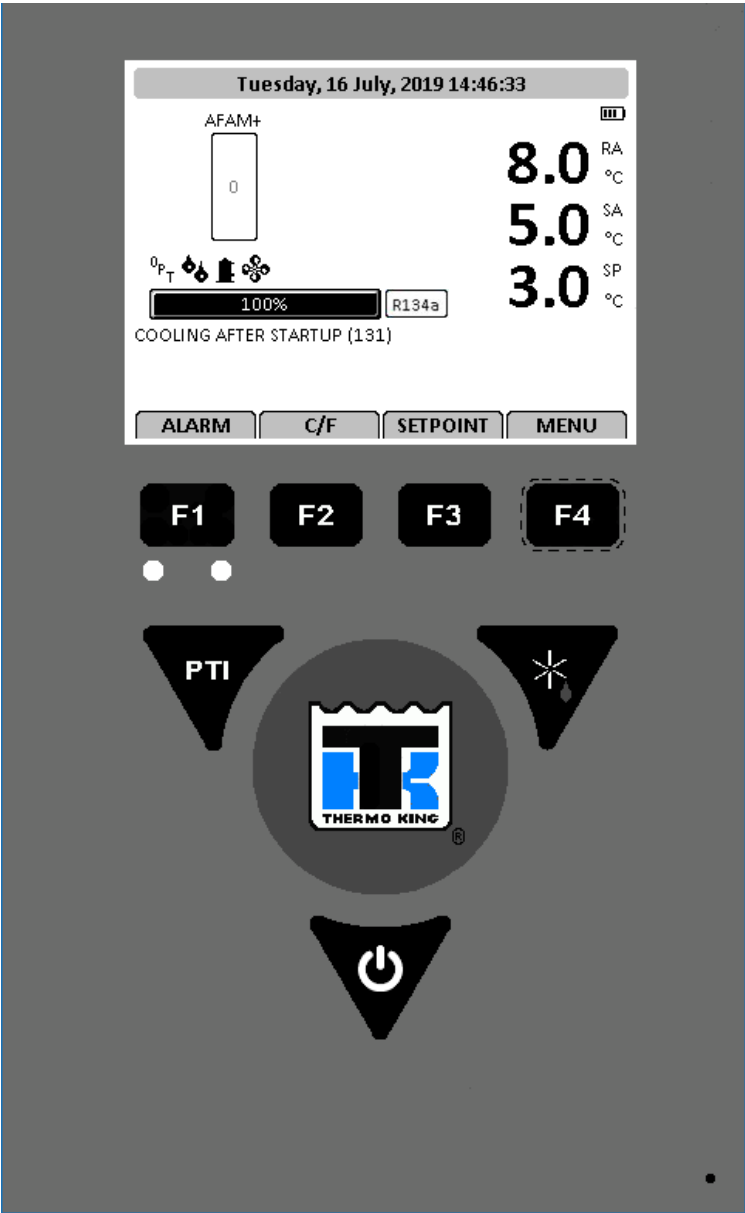

NOTE: All screens are NOT present on all units. The screen that display on the controller are determined by the Controller Software setting and the options installed on the unit.

NOTE: When a function key (F1, F3, F3 or F4) is pressed, the screen remains at that level until another function key is pressed.

To Enter a Controller Menu or Use Special Function Key:

- Press Alarm Key to Quickly view/Acknowledge Alarms (F1).
- Press C/F key to view alternate temperature scale in LED display (F2).
- Press SETPOINT Key to Quickly change Setpoint (F3)
- Press MENU Key to view the main menu (F4)
- Press DEFROST key to initiate a manual defrost. Evaporator coil temperature must be below 10C (50F) (*).
- Press PTI key to quick Start the Pre Trip Inspection (PTI)

To Enter a Submenu, a Command or a New Value in a Text Screen:

- Press F4 key.

To Scroll in a Menu or a Text Line:

- Press F2 key to scroll up or backward.
- Press F3 key to scroll down or forward.

To Exit a Menu or Text Line:

- Press F1 key.

To Lock a LCD Data Screen Display:

Maximum display time is 30 minutes for data screens and 100 minutes for manual tests. Press F1 key to exit display.

